


DIRECTIONAL SIGNAL AND HAZARD WARNING SWITCH

DESCRIPTION

The directional signal lever "C" is a three-position control lever. When the lever is pushed to the right, the signal lights on the right front and rear start flashing. When the lever is pushed to the left, the signal light on left front and rear start flashing. When the lever is moved to the center position, signal light go off. The hazard warning button "D" is a two-position control button. When the button is pulled to the "on" position, all signal light on the front and rear start flashing to indicate emergency. The hazard warning can return to "off" position by moving the lever to either right or left. When brake is applied, brake light will go on.

WIRING DIAGRAM

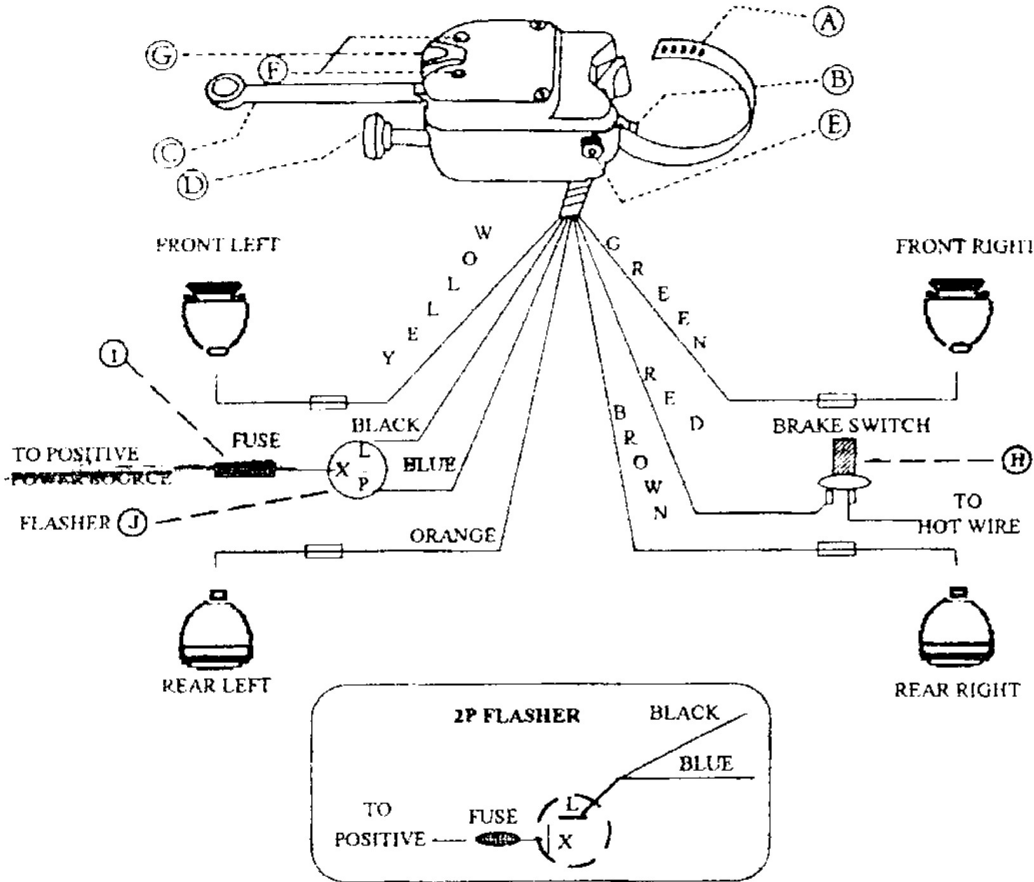

INSTALLATION INSTRUCTION

1. Insert clamp (A) in slot of bracket (B) and pull taut, mount to steering post. Make sure of a good ground by removing paint from steering column.
2. Mount flasher (J) to any convenient place.
3. Follow the wiring diagram to connect the relative wires and lamps

INDEX

<p>A Clamp</p> <p>B Strapping Bracket</p> <p>C Directional Signal Lever</p> <p>D Hazard Warning Button</p> <p>E Worm Screw (for strap adjustment)</p>	<p>F Directional Signal Pilot Light, Green</p> <p>G Hazard Warning Pilot Light, Red</p> <p>H Brake Switch</p> <p>I Fuse(14 Amps)</p> <p>J Flasher(2 or 3 prog)</p>
--	---