
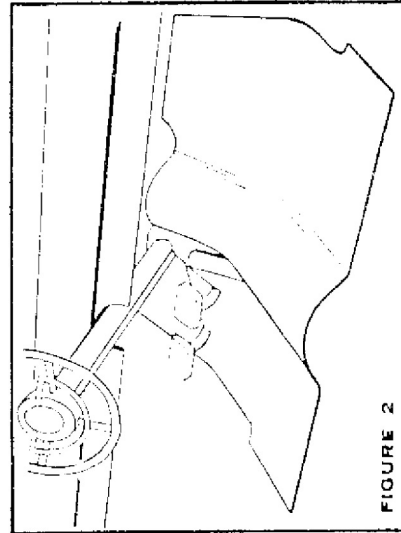


INSTALLATION INSTRUCTIONS REPLACEMENT CAR MAT

READ THOROUGHLY BEFORE INSTALLING

- Remove accelerator and old car mat*.
- Fold mat horizontally in half; take the front half and fold over back half. (See Fig. 1).
- Place new Car Mat on car floor in folded position with padded side down.
- Slowly unfold mat towards the motor and outline position of clutch, brake, accelerator, steering column and dimmer switch.
- Cut out holes from the outline and slit mat from top down to steering column, clutch and brake. (See Fig. 2).
- Install mat in car and trim edges for snug fit; replace accelerator.
- If you prefer, a paper pattern may be made by using a newspaper cut to mat size and following above instructions; when finished, transfer the newspaper hole outlines to the new Car Mat and complete installation.

*Your old car mat may be used as a pattern for quicker installation: After removing old car mat from car floor, place it over new car mat and trace the outline of the holes onto new car mat; complete installation from above instructions.

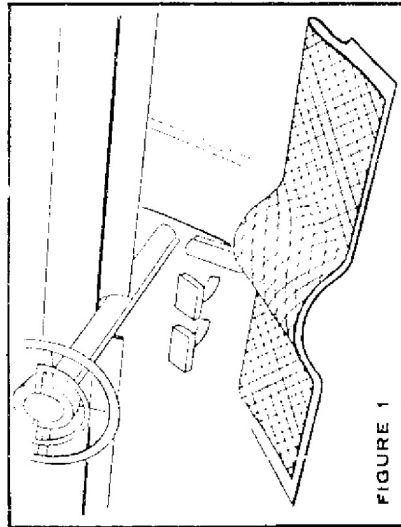

REAR MAT INSTALLATION:

Because of various differences in overall size due to many model variations your rear mat is purposely made extra large to accommodate all applications. For this reason use old mat when available as a pattern for easy installation. Place old mat over new mat and trace outline onto new mat. If old mat not available, place new mat on car floor with padded side down and trim edges for snug fit.