


INSTALLATION INSTRUCTIONS

— FOR SHOCK ABSORBER LINKS —

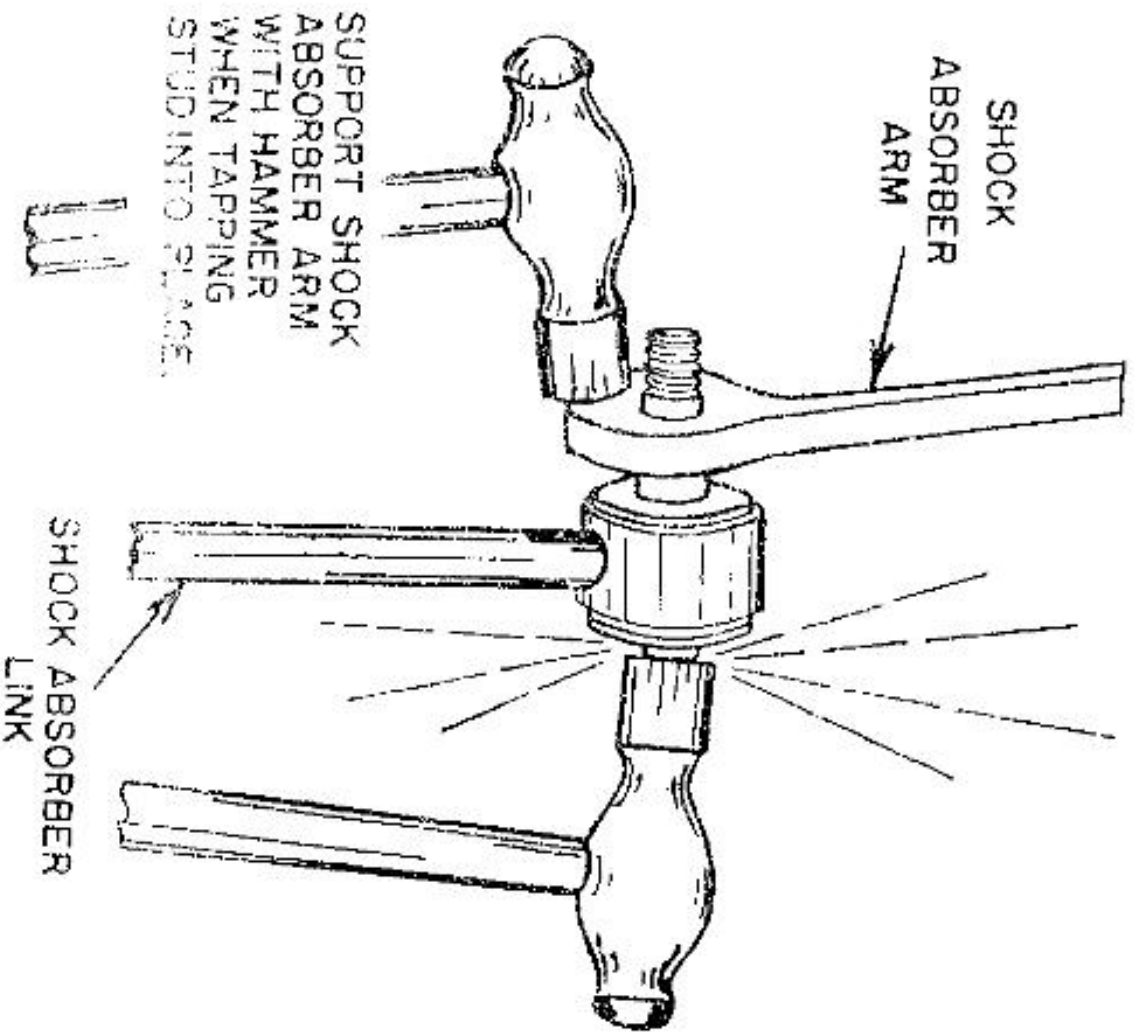

TAP END OF STUD WITH
HAMMER AS SHOWN SO
AS TO SEAT TAPER PART
OF STUD INTO TAPERED
HOLE....
THIS WILL HOLD STUD
SECURELY IN PLACE AND
KEEP IT FROM TURNING
WHEN TIGHTENING NUT.

WOHLERT CORPORATION

LANSING MICHIGAN

PRINTED IN USA